LIMITED WARRANTY

Aroma Housewares Company warrants this product against defects in material and workmanship for one year from provable date of purchase in the United States.

Within this warranty period, Aroma Housewares Company will repair or replace, at its discretion, defective parts at no charge, provided the product is returned, freight prepaid with proof of purchase and U.S. \$20.00 for shipping and handling charges payable to Aroma Housewares Company. Before returning an item, please call the toll free number below for a return authorization number. Allow 2-4 weeks for return shipping.

This warranty does not apply if the warranty period expired; the product has been modified by any unauthorized service center or personnel; the defect was subject to abuse, improper use not conforming to product manual instructions, or environmental conditions more severe than those specified in the manual and specification, neglect of the owner or improper installation; the defect was subject to Force Majeure such as flood, lightning, earthquake, other natural calamities, war, vandalism, theft, brownouts or sags (damage due to low voltage disturbances).

This warranty gives you specific legal rights, which may vary from state to state, and does not cover areas outside of the United States.

SERVICE & SUPPORT

In the event of a warranty claim, or if service is required for this product, please contact Aroma[®] customer service toll-free at:

1-800-276-6286

M-F, 8:30am-4:30pm, Pacific Time Or we can be reached online at:

CustomerService@AromaCo.com



Activate your warranty. Registration is quick and easy.

SCAN TO REGISTER or visit AromaCo.com/registration Note:

claims.

Proof of purchase is required for all warranty

Aroma Housewares Company 6469 Flanders Drive, San Diego, CA 92121, U.S.A. 1-800-276-6286 www.AromgCo.com M-F, 8:30am – 4:30pm, Pacific Time



To Enhance and Enrich Lives.





www.AromaCo.com



instruction manual ARD-125

Rice & Bean Dispenser

Questions or concerns about your Aroma product? www.AromaCo.com/Support 1-800-276-6286

DISCOVER more of our products!



Multicookers. Rice Cookers



Pot-Style Rice Cookers



Water Kettles



Indoor Grills





Here at Aroma we strive to make a difference-to design and distribute products that enhance and enrich people's lives.

Aroma offers an array of exceptional products to make cooking simple and satisfying. Discover other countertop appliances and cookware from our current product lineup to complement your kitchen.

REGISTER YOUR PRODUCT

Activate your warranty. Registration is quick and easy. Be notified of: new product releases new test kitchen recipes sales and promotions ...and more! SCAN TO REGISTER AromaCo.com/registration

/AromaHousewares

0)



IMPORTANT SAFEGUARDS

7. Do not use the dispenser for anything

9. Do not use the dispenser to store flour.

10. To avoid overheating and damage to

11. Always make sure the outside of the

dispenser is dry prior to use.

12. Intended for household use only.

the dispenser, do not store in direct

Do not immerse the dispenser in water

other than its intended use.

or any other liquid.

wheat, or sugar.

sunliaht.

Basic safety precautions should always be followed when using the dispenser, including

8.

the following:

children.

5.

6.

product or injury.

Do not use outdoors.

1. Important: Read all instructions

2. Store on a level, dry and heat-resistant

surface and in a room that will not

reach below 39°F or above 104°F.

3. Close supervision is necessary when

the dispenser is used by or near

4. The use of accessory attachments

not recommended by Aroma®

Housewares may result in a damaged

Do not place on or near a hot gas or electric burner or in a heated oven.

carefully before first use.

- 2.
- cloth.
- - 6. Reassemble for use.
 - **TO CLEAN**
 - 1.
 - cloth.


 - Reassemble for next use. 4.

STORING &

- pounds of dry food.
- Close the lid of the dispenser. 3.
- ingredients as desired.
- firmly.

SAVE THESE INSTRUCTIONS

Aroma Housewares Co. | 6469 Flanders Drive, San Diego, CA 92121, U.S.A. 1-800-276-6286 www.AromaCo.com ©2021 Aroma Housewares Company | All rights reserved.

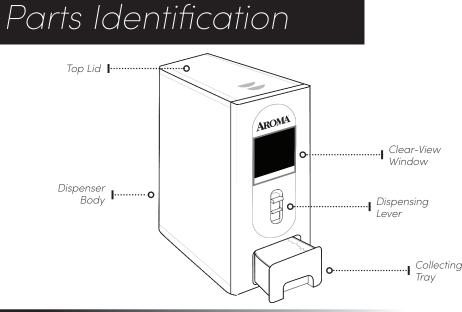



1. Read all instructions and important safeguards.

Remove all packaging materials and check that all items have been received in good condition. Inspect the container for any chips or cracks.

3. Tear up all plastic bags and dispose of properly as they can pose a risk to children.

4. Wipe the interior and exterior using a clean, soft

5. Remove the collecting tray from the dispenser and wipe with a clean, soft cloth.

Empty the dispenser of all food and debris.

2. Wipe the interior and exterior using a clean, soft

3. Remove the collecting tray from the dispenser and wipe with a clean, soft cloth.

DISPENSING FOODS

1. Open the lid on the top of the dispenser.

2. Slowly add rice, beans, or other dry food into the dispenser. The dispenser must be filled with a minimum of 5 pounds and a maximum of 25

4. Press down on the dispensing lever. Each lever press dispenses one rice measuring cup (180mL) of dry food into the collecting tray.

5. Remove the collecting tray and use the

6. After each use, always replace the collecting trav into the dispenser and make sure it is closed

Caution:

Do not overfill the dispenser. The maximum capacity of this dispenser is 25 pounds of rice.

Do not fill the dispenser if the interior is wet. Food will not properly store and preserve if the dispenser is wet.

Do not press the dispenser lever more than 5 consecutive times without first collecting the food dispensed into the collecting tray. The

collecting tray cannot contain more than 5 cups of dry food at a time.

Note:

- Never use a damp cloth to clean the interior of the dispenser or collecting tray In order to preserve foods the interior of the dispenser must be kept dry
- Do not immerse the dispenser or any of its parts in water.
- When pressing the dispenser lever, note that there should be 2 to 3 seconds interval time between each press. To ensure every press will dispense a full volume of rice, gently shake the dispenser to settle the dry food inside.
- Rice roughly doubles in amount when cooked. 1 cup of uncooked rice is equal to 2 cups of cooked